



## **⚠ IMPORTANT SAFETY INSTRUCTIONS**

### **READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

**FOR US MODELS ONLY** – This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

1. Use this fan only as described in this manual. Other use not recommended as it may cause fire, electric shock or injury to persons.
2. This product is intended for household use **ONLY** and not for commercial, industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.

## **QUIETSET® WHOLE ROOM TOWER FAN**

HYF260W Series

HYF260B Series

HYF290B Series

4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan **OFF** and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first turn the unit **OFF**, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
8. Do not use an extension cord with this fan.
9. Do not operate the fan in the presence of explosive and/or flammable fumes.
10. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
11. Do not operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner (see warranty).
12. Avoid contact with moving fan parts.
13. The use of attachments not recommended by the manufacturer may be hazardous.
14. Place the fan on a dry level surface.
15. Do not hang or mount fan on a wall or ceiling.
16. Do not operate if the fan housing is damaged.